


QUICKSNAP

Square Column Installation Instructions

Mate each of the two pieces together of the top and bottom mounting plates and secure in position using suitable fasteners.


NOTE: fasteners are not included for securing the mounting plates and it is the installers responsibility to ensure proper fasteners are used.

Diagram A

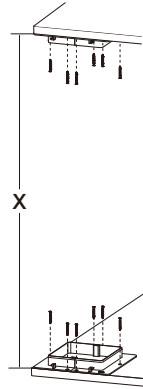


Measure the clear opening ("x" on diagram A) and cut each quarter piece of the column separately before assembling.

Diagram B

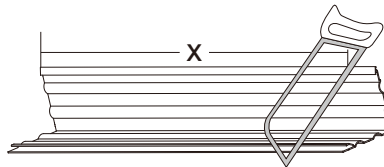

Join 2 quarter pieces together by mating tongue into groove and tapping together using a rubber mallet. Repeat this step with the two remaining quarter pieces. Position the two halves of the column around the mounting plate. Beginning at the base of the column working up, use a rubber mallet to tap the two halves together on one side. Repeat this step on the other side. Secure the column to the mounting plates at the top and bottom using #10 x 3/4" self drilling screws provided. (See diagram C)

Diagram C

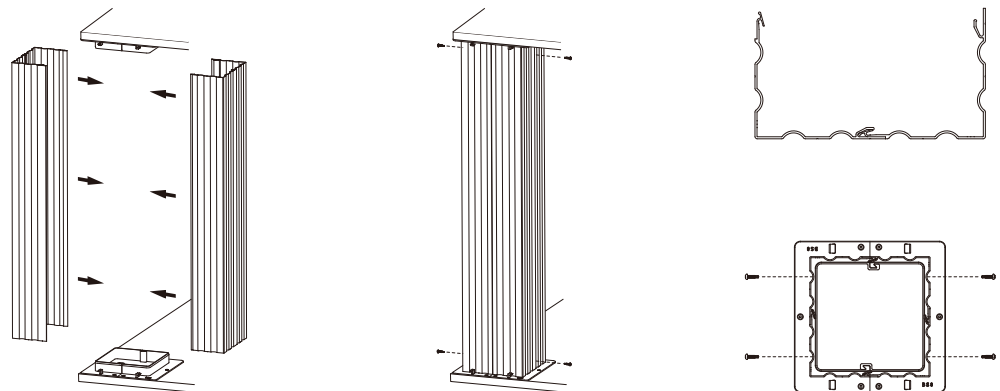

Secure the cap and base pieces in place by sliding the hooked portion of the cap or base into the hooked portion of the mounting plates. Fasten the two pieces of the cap or base putting # 10x 3/8" screws in predrilled holes of the adjoining corners.

Diagram D

